

Application Note – ACC Mobile Proxy



With the 1.13 version we are introducing a new feature, a Mobile Proxy, to the ACC module.

In this Application Note, we will show you how to set up the ACC Mobile Proxy feature.


Introduction

Mobile Proxy feature gives you ability to unlock you home or business for a visitor remotely from any location in the world, provided you have internet access.

Configuring the ACC


In order to configure and use ACC Mobile Proxy, we first need to log into the device.

When we reach the Dashboard screen, click on the Settings Panel located in the menu on the left side of the screen and then click on System Settings.

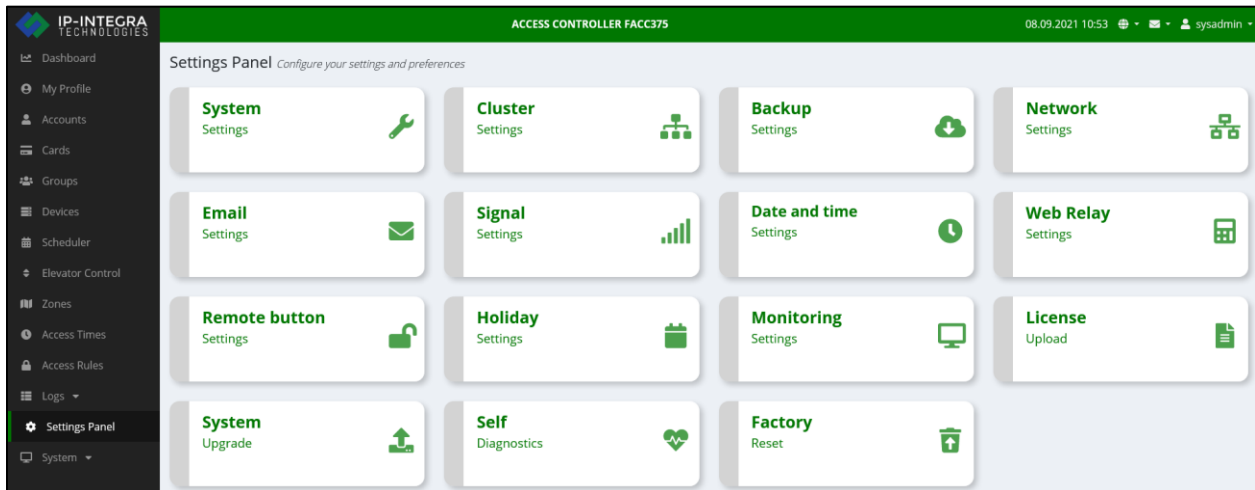

PICTURE1 – SETTINGS PANEL

The following screen will show:

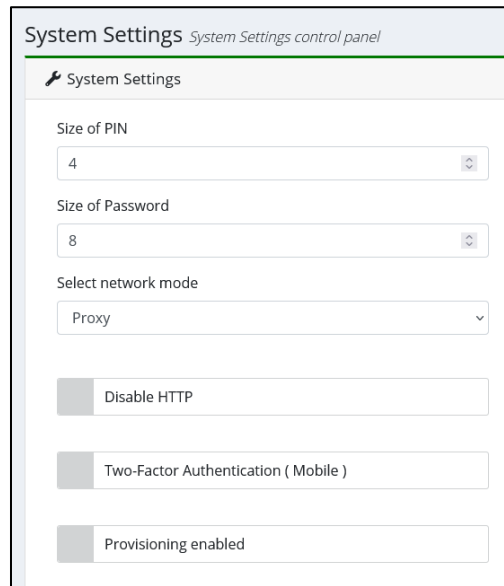

System Settings *System Settings control panel*

System Settings

Size of PIN
4

Size of Password
8

Select network mode
Proxy

Disable HTTP

Two-Factor Authentication (Mobile)

Provisioning enabled

PICTURE2 – SYSTEM SETTINGS

Under “**Select network mode**” field, select “**Proxy**” option.

Finally click on “**Save changes**” and apply them when asked to.

To confirm Mobile Proxy feature is working, click on Dashboard. Under “System Info” field, **Proxy Server** option should show “**Enabled; Connected**”.

SYSTEM INFO	
HWID	05D9FF323937424D43207520
Firmware / Hardware Version	1.21 / INT4D v1.2
MAC Address	02:42:46:25:c0:99
IP Address	192.168.200.118 / 77.78.204.154
Cluster Mode	Disabled
Remote Support	Disabled
PROXY_SERVER	Enabled CONNECTED
Power Source	PoE
Battery Status	Not Connected

PICTURE3 SYSTEM INFO