

Application Note – ACC – Zone Blocker Setup



Introduction

In this document we will explain how to set up your IP-INTEGRA Access Control system to block certain Zones based on inputs to the Controller.

Activation – IP-INTEGRA ACC

Log in to the controller and navigate to **Zones** section.

Click on „**Add new**“ button and enter a name for the zone. Below the name there is an option to enable „**Block Zones by Alarm**“. Once enabled, it is possible to select on which input the Zone will be blocked: Input 1 or Input 2.

Add new zone


Name
Blocked Zone

Block Zones By Alarm

Alarm on:
Input 1

Save Changes Cancel

Finally, **save** changes and **apply** them.

If you need to add this function to existing zone, simply click on **Edit Zone**  button and enable the „**Block Zones by Alarm**“.

Once the input becomes active, you will see **1** in the Cluster info section of Devices page, see example below.

Type	Device Name	Host Name	IP Address	Cluster Info	Version	Doors	Status	Actions
>	Master Controller <small>This device</small>	facc782	192.168.200.111 109.165.234.33	Toggle test 82 M	v1.15.48	Door 0 A B Door 1 A B Door 2 A B Door 3 A B	OK	
>	Slave - Elevator Module	facc1338	192.168.200.104 109.165.234.33	Toggle test 82 5 1	v1.15.48	Floor -1 A B Floor -2 A B Floor -3 A B Floor -4 A B	OK	
	FE-IPDS-20-05:09 FE-IPDS-20		192.168.200.105	EXTERNAL		FE-IPDS-20-05:09	OFFLINE	
	FE-IPDS-29S-05:18 FE-IPDS-29S		192.168.200.126	EXTERNAL		FE-IPDS-29S-05:18	OFFLINE	